


## Desktop Book Display Model# ELR-17104

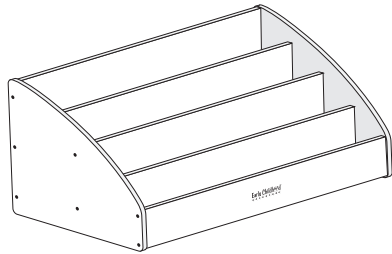

### **⚠ WARNING:**

#### Adult Assembly Required.

Two adults recommended.

- Contains small parts, sharp points and edges.
- Do not stand, sit, kneel, climb, lean or pull on unit for support.
- Never leave children unattended.
- Do not place unit near high heat or moisture.
- Adult supervision recommended.

#### TOOLS INCLUDED

- Hex Tool (1)










 

#### TOOLS NEEDED

- + Phillips Screwdriver



## Parts List

BEFORE ASSEMBLING, MAKE SURE YOU HAVE ALL THE PARTS

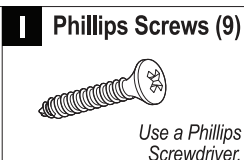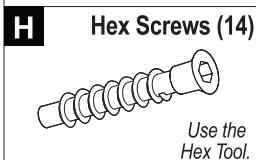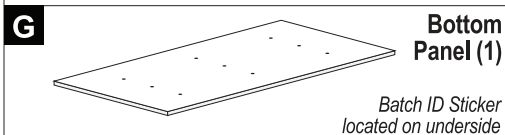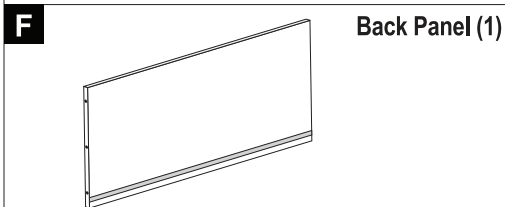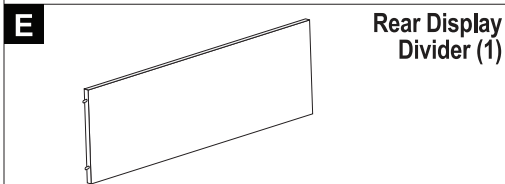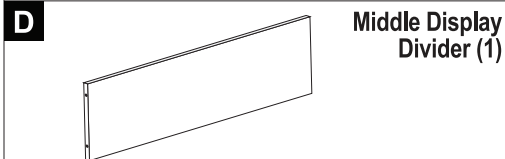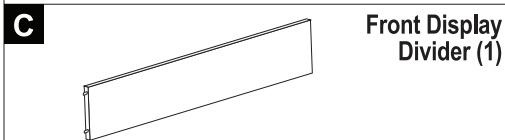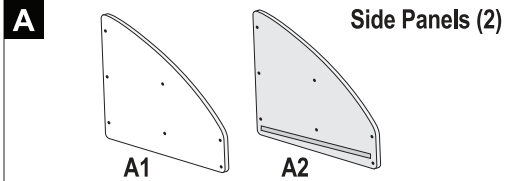


## 1 Install the Left Side Panel

Install the Left Side Panel (A1) onto the Front & Back Panels (B, F) and Middle Display Divider (D) with seven Hex Screws (G) using the Hex Tool.

The Middle Display Divider's edge with three holes, faces the bottom.


Carefully rotate the unit onto the Left Side Panel.

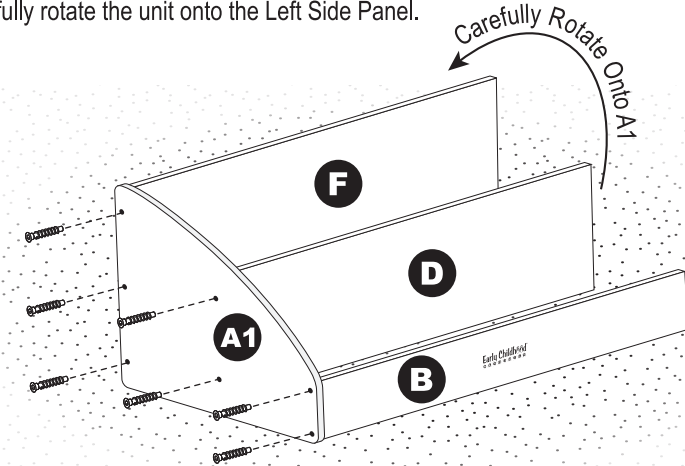


## 2 Insert the Bottom Panel

Slide the Bottom Panel (G) into the grooves on the Front & Back Panels (B, F) until fully seated into the groove on the inside of the Left Side Panel (A1).

*Tip: If the Bottom Panel does not slide in easily, wiggle the panel while pushing into place.*

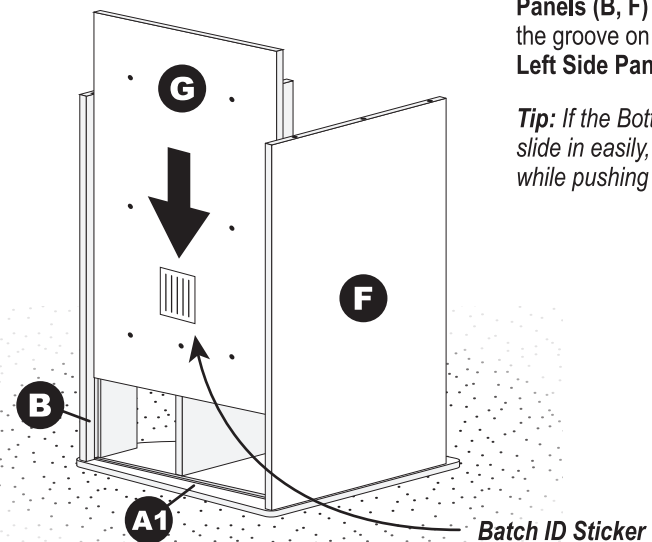


# 1 Insert the Display Dividers

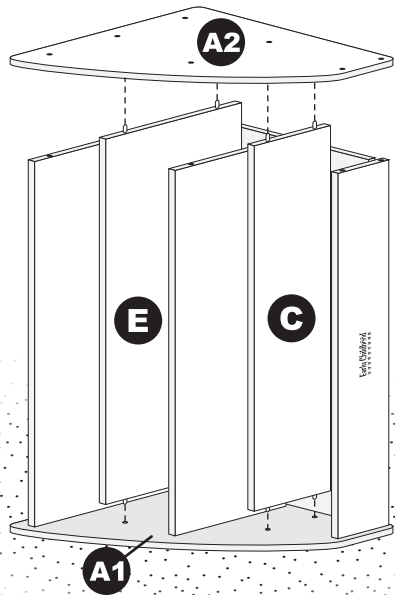

Insert the pre-installed wooden dowels on the ends of the **Front & Rear Display Dividers (C, E)** into the corresponding holes on the inside of the **Left Side Panel (A1)**.

Align the **Right Side Panel (A2)** so the dowels on the ends of the **Front & Rear Display Dividers (C, E)** and **Bottom Panel (G)** insert into their corresponding holes/groove.

# 2 Connect the Right Side Panel & Bottom

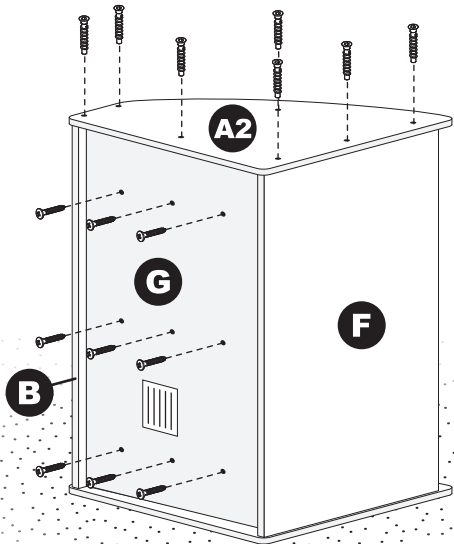

Install the **Right Side Panel (A2)** onto the **Front & Back Panels (B, F)** and **Middle Display Divider (D)** with seven **Hex Screws (H)** using the Hex Tool.

Install nine **Phillips Screws (I)** through the **Bottom Panel (G)** into the corresponding **Display Dividers (C, D, E)** with a Phillips screwdriver.

*Tip: Install the center screw on each Display Divider first.*

**Early Childhood  
RESOURCES**

We appreciate your purchase of the Desktop Book Display. Early Childhood Resources has made every effort to supply a quality product, that with proper use and care, will bring you many years of trouble free use!

If you experience any difficulties with this product, please email us at [customerservice@ecr4kids.com](mailto:customerservice@ecr4kids.com) or call toll-free at (888) 227-9028 (Monday - Friday, 7:00am - 4:00pm Pacific Standard Time)

**Please do not return** to place of purchase as Early Childhood Resources will replace defective part(s) and/or product.



"Early Childhood Resources® guarantees the quality of all of our products. You can trust the quality and safety of our furniture and materials, along with the peace of mind that our products are made to last. If for any reason, you are not satisfied with the quality and workmanship of our products, we will replace the item or refund the sale."

## Care and Cleaning

Clean wood with a damp cloth or sponge using warm water and mild soap. Wipe dry.

Do not place near heat, moisture or vaporizer which may cause wood to warp and peel.

Check for loose or worn parts periodically and tighten or replace as necessary.

**Record the manufacture date here. Information is located on the Batch ID sticker and on the shipping carton. Save this sheet in an accessible place.**

**Model Number:** ELR-17104

**Factory Code:**   D  

**Manufacture Date:** \_\_\_\_\_

**Batch ID Number:** \_\_\_\_\_  
(Located on Part G)